



Cisco Radio Indicator Lights



Solid Blue= Normal operating condition with at least one wireless device associated

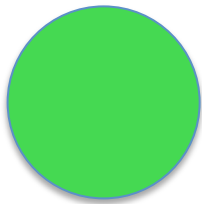


Solid Light Green= Normal operating condition with no wireless devices associated

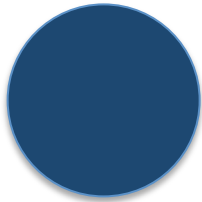

Blinking Dark Blue=Software upgrade in progress



Solid Amber= IOS errors

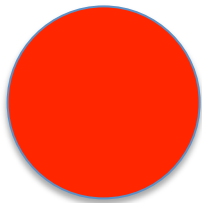

Blinking Red=Boot loader errors